



WINDOW CORP.

"Where Quality Rules"
Since 1955

DOUBLE HUNG PRIME REPLACEMENT WINDOWS

OPERATING INSTRUCTIONS

SASH OPERATION

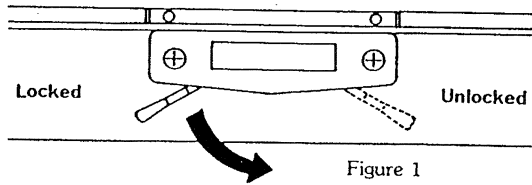


Figure 1

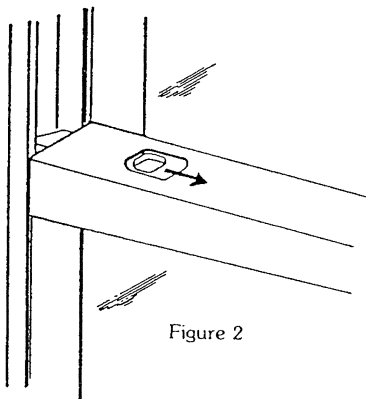


Figure 2

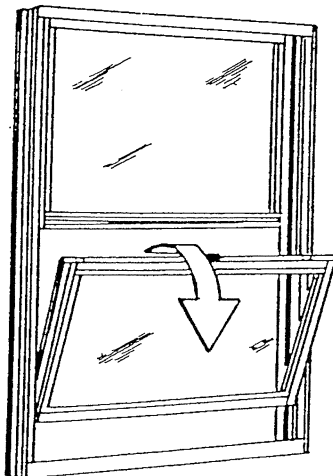


Figure 3

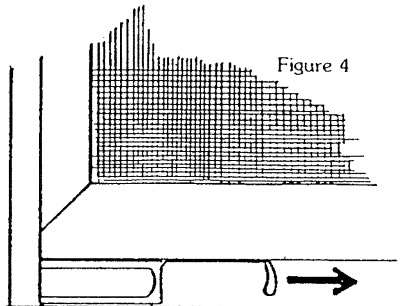


Figure 4

1. Unlock sashes (top and bottom) by disengaging lock(s) at meeting rail. (Figure 1)
 2. Raise bottom sash 5-6 inches.
 3. Disengage left and right tilt latches by pulling with fore fingers toward center of sash. (Figure 2)
 4. With tilt latches disengaged pull bottom window sash toward you so that it will tilt into the opening. (Figure 3)
- Tilt window with care. Do not allow to fall freely. Do not attempt to remove sash from main frame of window. Clean bottom sash.
5. Lower top sash 5-6 inches and repeat above procedure. Make sure that bottom sash remains in a tilted position. Clean top sash.
 6. When cleaning has been completed tilt top sash back into the window frame.

Be sure to first disengage the left and right tilt latches by pulling with fore fingers toward the center of sash. (Figure 2)

Be sure to check and make sure that the left and right tilt latches have "snapped back" (engaged) completely into the window frame. If they have not yet fully engaged it might be necessary to push them with your fore finger to make them completely engage.

The top sash can now be fully raised back into a closed position.

7. Tilt the bottom sash back into the window frame and follow the procedures as outlined in step 6.
- The bottom sash can now be lowered back into a closed position.
8. Lock sashes (top and bottom) by engaging lock(s) at meeting rail. (Figure 1)

SCREEN OPERATION

1. With bottom sash in an open (up) position disengage left and right screen locks to raise screen. (Figure 4)

To lock screen bring screen to down (closed) position. Screen locks will automatically engage in notches provided at bottom of screen tracks.